REV A-3 21 2016


## **Door Frame Cover**


## **Field Measurement**

- Protek door frame covers are manufactured in accordance with field dimensions provided by the customer. All frame covers are pre-cut and formed at the factory and should require no further modification. Accuracy of field measurements is crucial to the success of final installation.
- All dimensions should represent actual dimensions of the existing frames. The factory will fabricate the inside dimensions of the frame covers to match existing frame dimensions. Please verify there is enough clearance between the door and soffit of the frame to accept the added thickness of the frame cover. If there is not enough clearance, the door will not close properly.

## **Installation Instructions**

- Adhesive installation Dry fit the frame cover to the frame to ensure a proper fit. Apply a bead of ADH-50 silicone sealant adhesive in a zig-zag pattern on the back of each surface of the frame cover. Position the frame cover on the frame and apply pressure until a tight fit is achieved. If required, use additional bracing until the adhesive cures.
- Screw-On installation Dry fit the frame cover to the frame and mark the mounting hole locations on the frame. Drill pilot holes into the frame, then fasten the frame cover to the frame with the appropriate hardware.

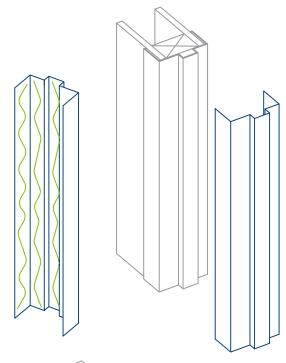

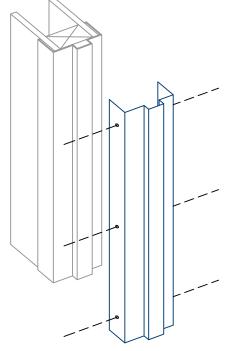

**DISCLAIMER:** Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any problems caused by errors in installation. The manufacturer of this product shall not be held responsible for installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions. These installation guidelines are intended to be strictly recommendations and are not to serve as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner and architect. Protek Systems, Inc. does not accept any responsibility for job failure resulting from or associated with improper site environmental conditions and installation failure due to expansion contraction issues.