

Super Duty Cleaning & Maintenance

Clean the super duty coating with a stiff brush, water, and automotive soap. Scrub well. If extremely soiled, clean with a calcium, lime, rust (CLR) cleaner. Once dry, you can also apply a non-silicone, non-oil protectant to keep a clean finish.