

HDPE Bumper Base


Installation Instructions

- Install wall base straight, level, and tight to the substrate with appropriate fasteners. Drill holes with 1/2-inch counterbore no less than 2-inches and no more than 8-inches from ends, and space evenly in a staggered fashion not to exceed 16-inches.
- At corners, provide mitered cuts.
- Use maximum lengths to minimize joints. Provide scarf joints between pieces.

Important

1. Acclimate materials to the installation environment for 24 hours prior to installation. Maintain a temperature controlled environment during and after installation.
2. To cut the material, use a chop saw with fine-tooth blade.
3. To make hole plugs, drill out 1/2-inch plugs from scrap material using a Wolfcraft plug cutter bit. Insert plug into counterbored holes.

Drilling Pattern

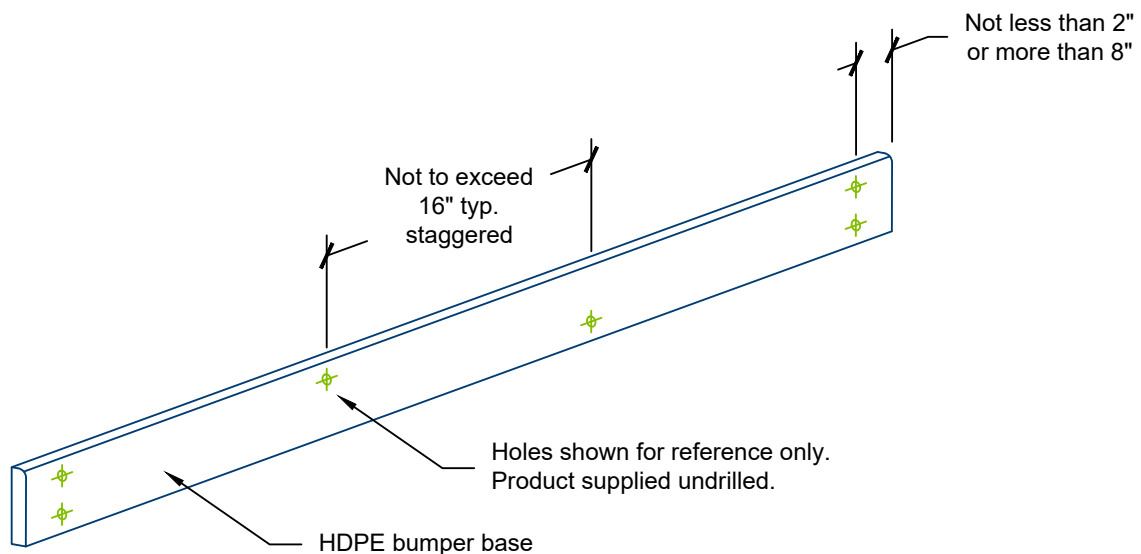

DISCLAIMER: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any problems caused by errors in installation. The manufacturer of this product shall not be held responsible for installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions. These installation guidelines are intended to be strictly recommendations and are not to serve as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner and architect. Protek Systems, Inc. does not accept any responsibility for job failure resulting from or associated with improper site environmental conditions and installation failure due to expansion contraction issues.