


Full Dome Safety Mirrors

Installation Instructions

- Note: if the wire seems to be loose at the centered washer, additional tension may be created by squeezing the inverted "U" area of the wire with pliers (in the center of each wire).
- The mirror can now be hung with any cord, wire, or chain.
- Attach the cord to center washer.
- To level the mirror, attach a second cord to lowest end of the mirror at the inverted "U" area of the wire and tie the other end of the leveling cord to the midpoint of the center cord.

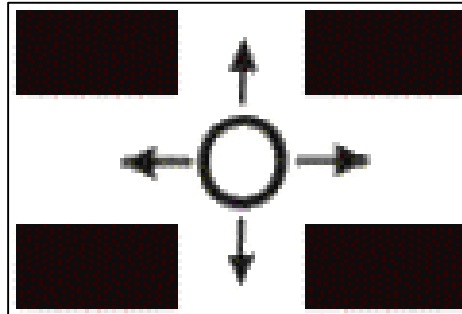

DISCLAIMER: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any problems caused by errors in installation. The manufacturer of this product shall not be held responsible for installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions. These installation guidelines are intended to be strictly recommendations and are not to serve as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner and architect. Protek Systems, Inc. does not accept any responsibility for job failure resulting from or associated with improper site environmental conditions and installation failure due to expansion contraction issues.